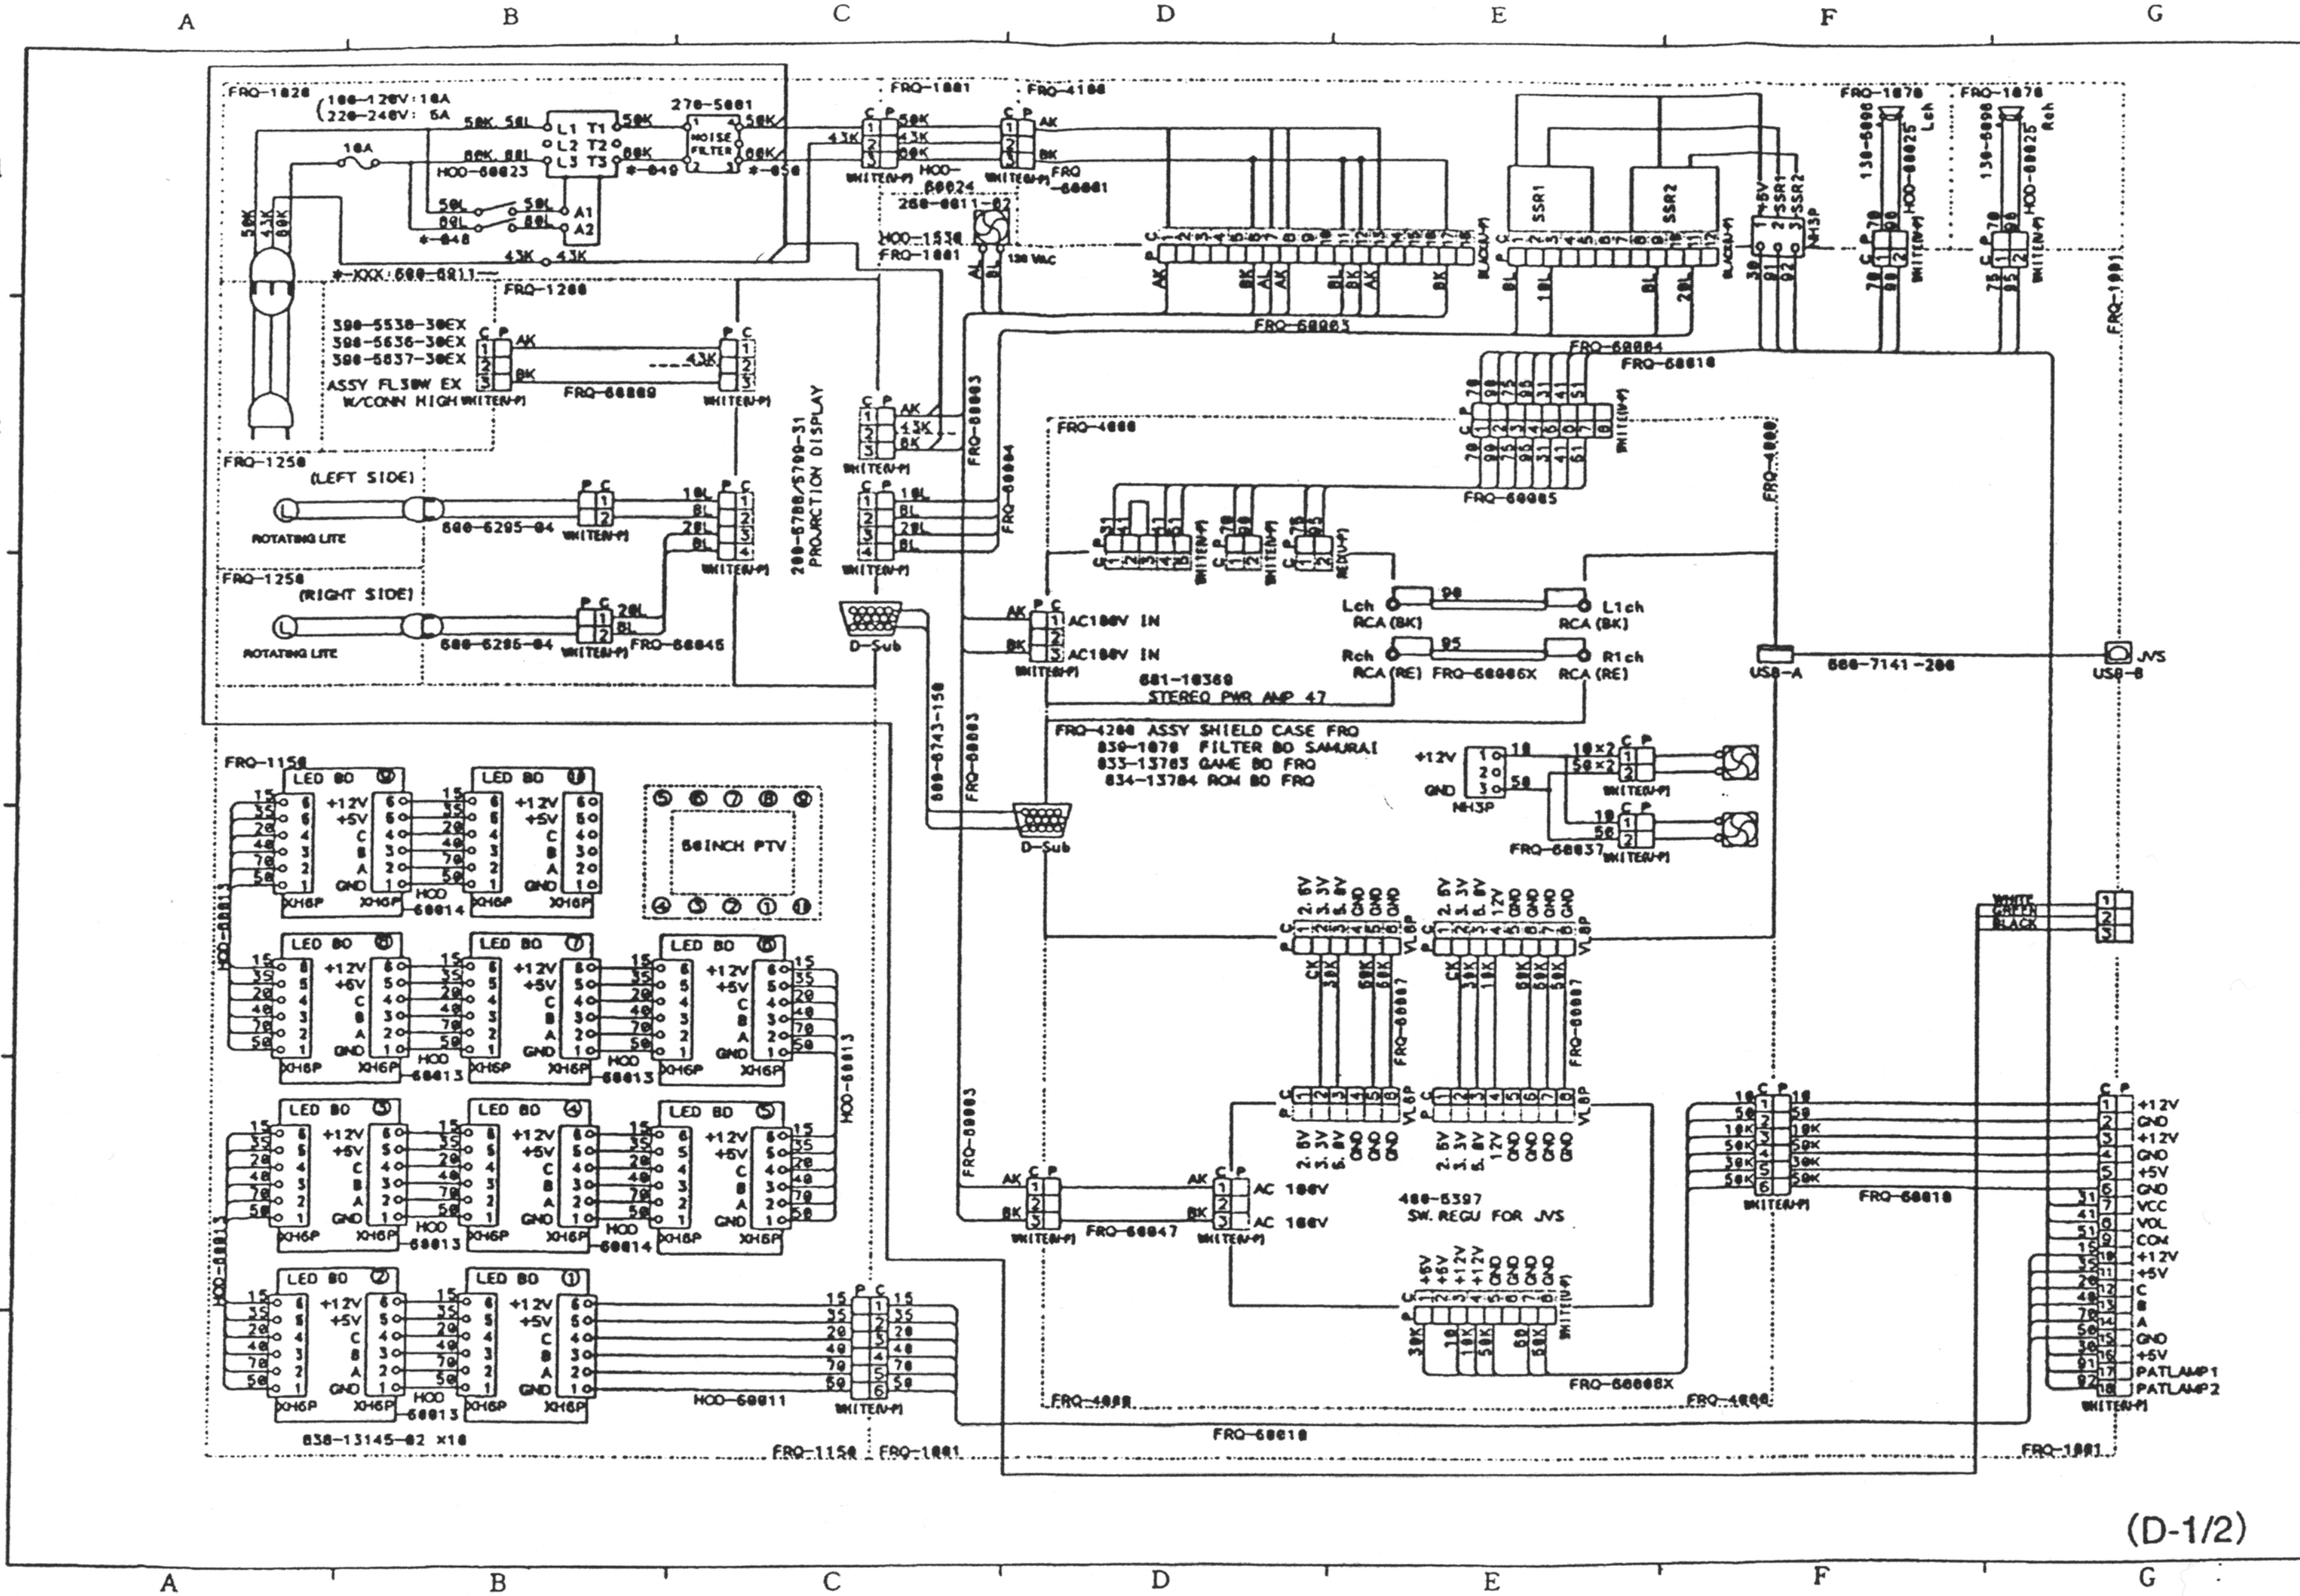
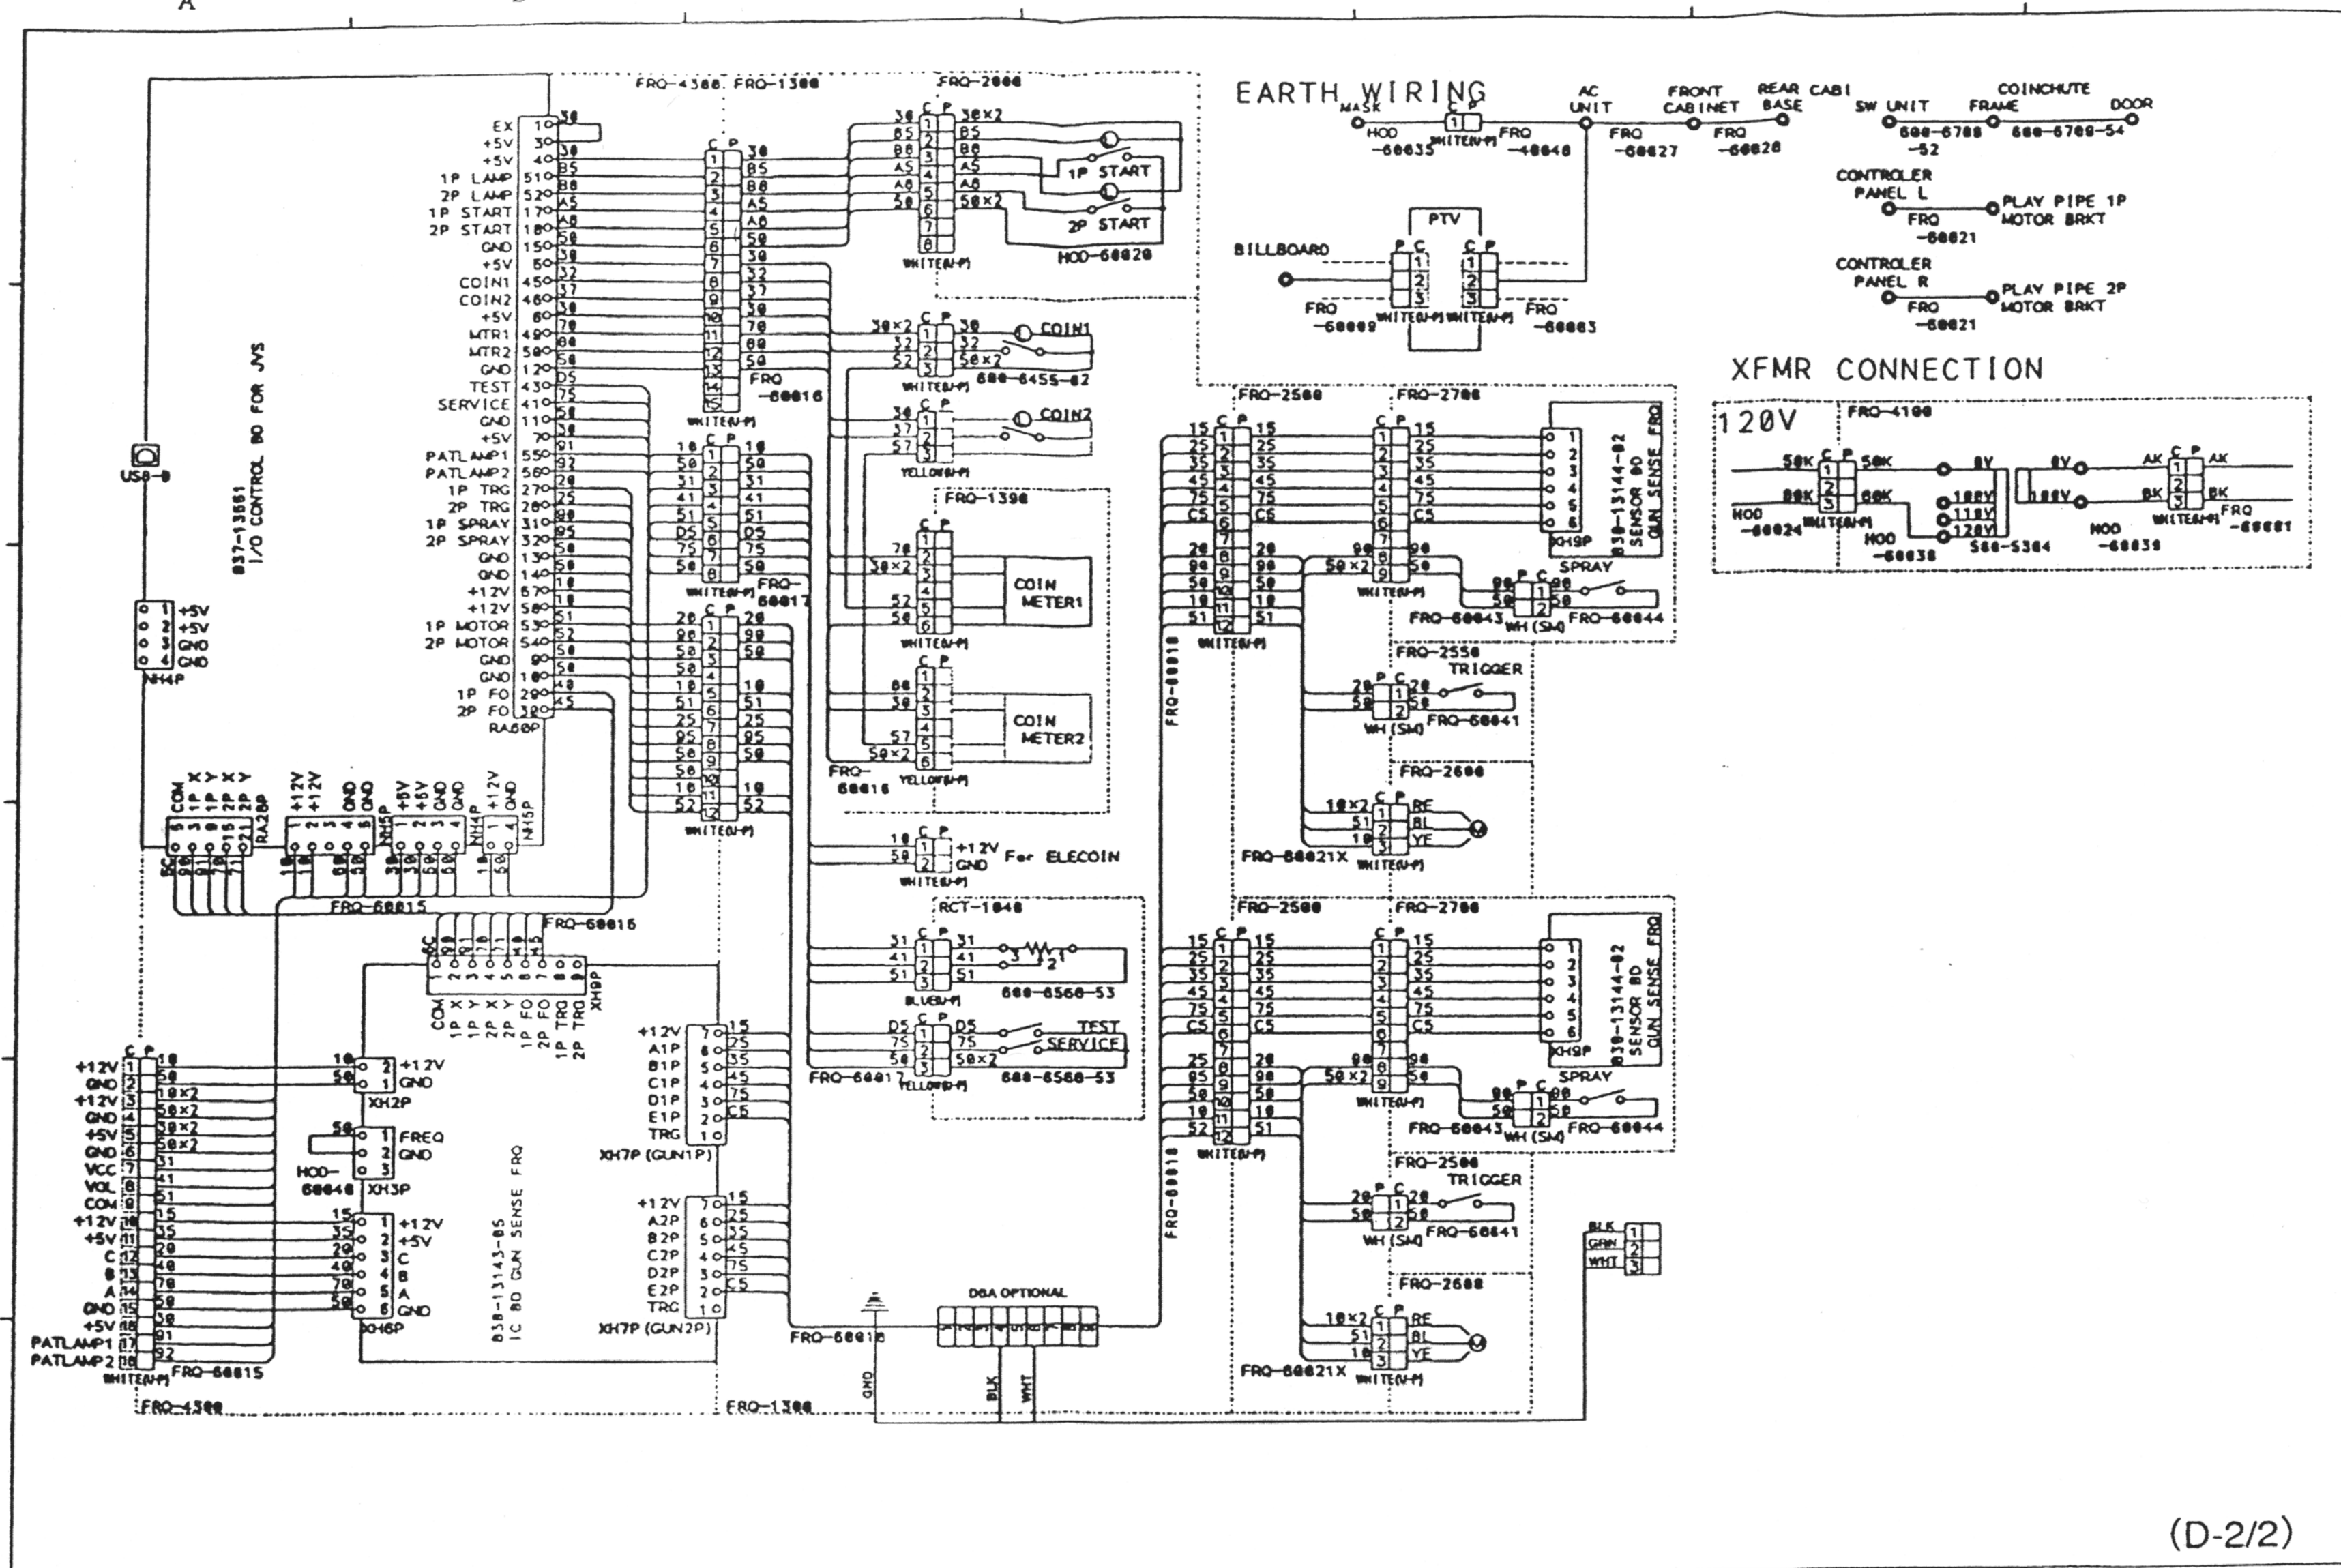


FRQ-1020
100-120V: 10A
220-240V: 5A
270-5001
NOISE FILTER
FRQ-1001
FRQ-4100
SSR1
SSR2
FRQ-1070
130-5000
HOO-60025
Lch
Rch
FRQ-1200
300-5536-30EX
300-5636-30EX
300-5637-30EX
ASSY FL30W EX W/CONN HIGH
FRQ-1250
(LEFT SIDE)
ROTATING LITE
(RIGHT SIDE)
200-5700/5700-31 PROJECTION DISPLAY
D-Sub
FRQ-4000
AC100V IN
681-10360
STEREO PWR AMP 47
RCA (BK)
RCA (RE)
USB-A
USB-B
JVS
FRQ-4200 ASSY SHIELD CASE FRQ
838-1070 FILTER BD SAMURAI
833-13783 GAME BD FRQ
834-13784 ROM BD FRQ
FRQ-1150
LED BD
50INCH PTV
838-13145-02 ×10
400-5397
SW. REGU FOR JVS
PATLAMP1
PATLAMP2
(D-1/2)


EARTH WIRING
XFMR CONNECTION
120V
837-13551 I/O CONTROL BD FOR JVS
838-13143-05 IC BD GUN SENSE FRQ
838-13144-02 SENSOR BD GUN SENSE FRQ
1P START
2P START
COIN1
COIN2
COIN METER1
COIN METER2
For ELECOIN
TEST
SERVICE
SPRAY
TRIGGER
BILLBOARD
PTV
MASK
AC UNIT
FRONT CABINET
REAR CABI BASE
SW UNIT
COINCHUTE FRAME
DOOR
CONTROLER PANEL L
CONTROLER PANEL R
PLAY PIPE 1P MOTOR BRKT
PLAY PIPE 2P MOTOR BRKT
DSA OPTIONAL
XH7P (GUN1P)
XH7P (GUN2P)
FRQ-4300
FRQ-1300
FRQ-2000
FRQ-2500
FRQ-2700
FRQ-2550
FRQ-2600
FRQ-4100
FRQ-1390
RCT-1040
(D-2/2)